


Box: PLOCK 2

BIKE	TRIUMPH Scrambler 900cc	PART NO.	TR-84
YEAR	2014- Current	FIT KITS	OVAL Z039.10568
NOTES	Where not supplied use original fittings. If bike has lambda sensors remove blanking plugs to fit into Scorpion header pipes.	FEATURES	DB KILLER Z038.10536 (KK)

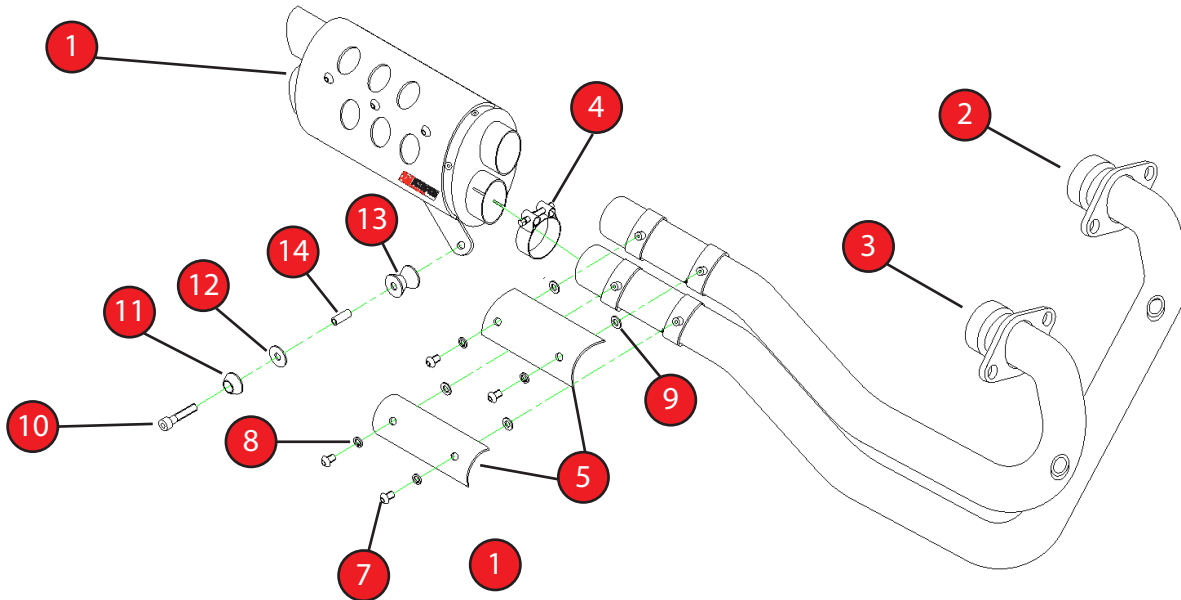

- | | |
|---|---|
| 1 200mm Oval Silencer ESC307 | 8 7x M6 Spring Washer (Z017.10027) |
| 2 L/H Header Pipe CP796 | 9 7x M6x13mm Fibre Washers (Z017.12748) |
| 3 R/H Header Pipe CP797 | 10 M8x40mm Cap Head Bolt (Z017.10076) |
| 4 40-43mm Clamp (Z016.10007) | 11 Alloy Bolt Finisher (Z026.20068) |
| 5 2x Connecting Pipe Heat Shield (Z007.31240) | 12 M8x30mm Washer (Z017.12754) |
| 6 Silencer Heat Shield (Z007.31238) | 13 Rubber Bush (Z016.10046) |
| 7 7x M8x8mm Button Head Bolt (Z017.10001) | 14 Rubber Insert (Z004.10022) |

E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	0
DATE	08/12/16
AUTHORISED	S.Jackson
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above, making sure system is clear of all moving parts.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.